

FIG. 1

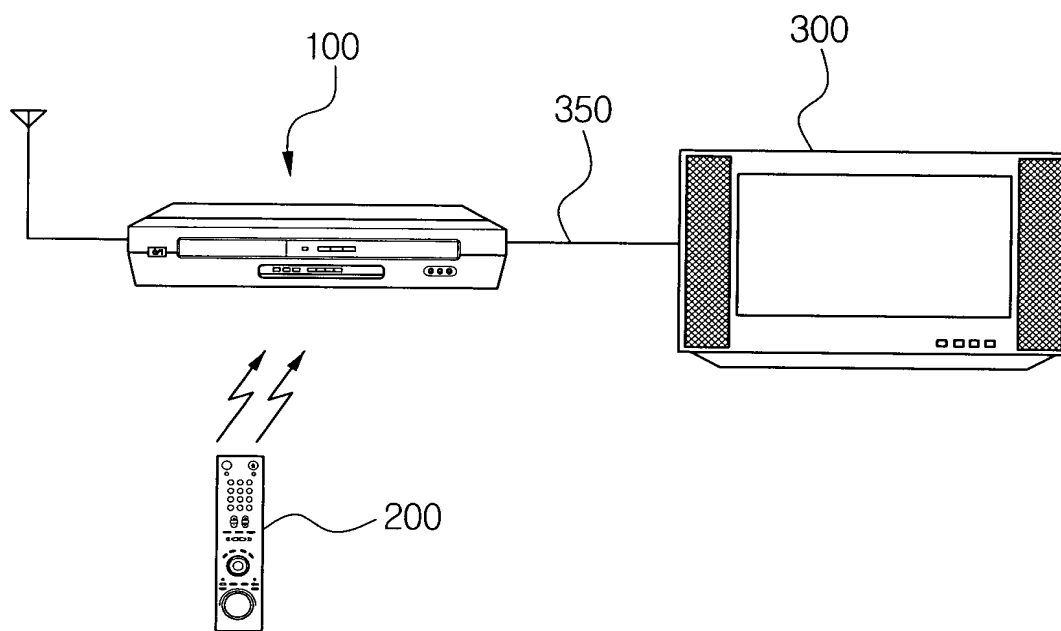


FIG. 2










 

 
 
FIG. 3

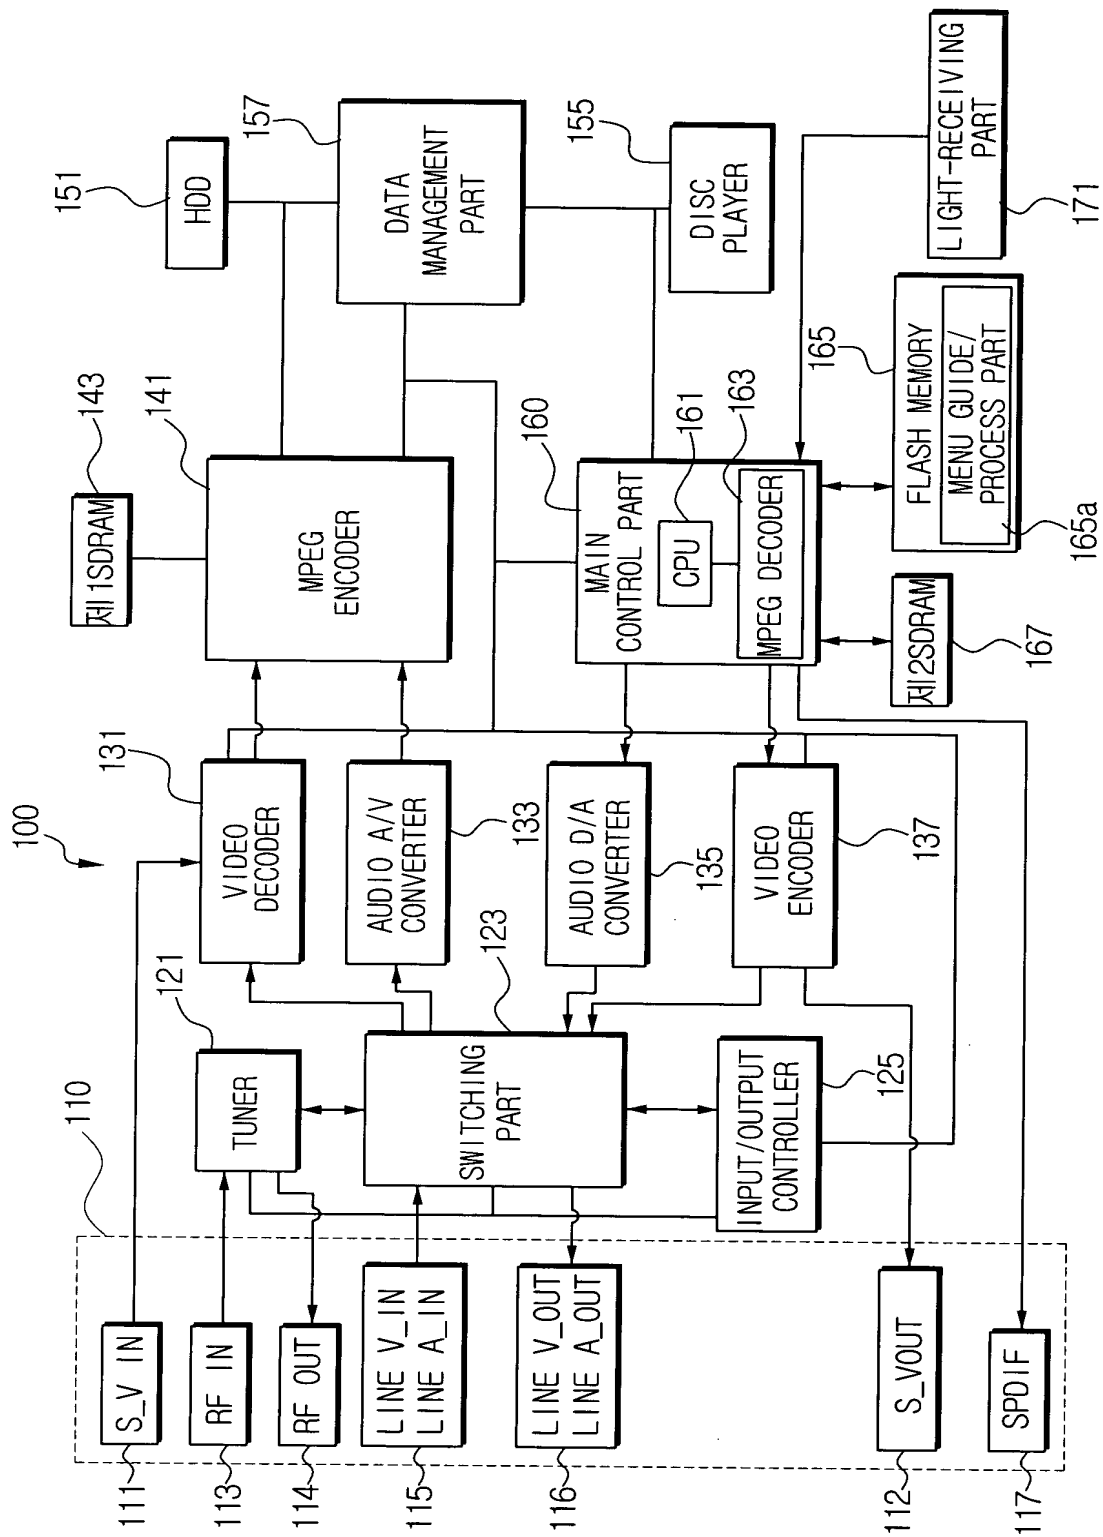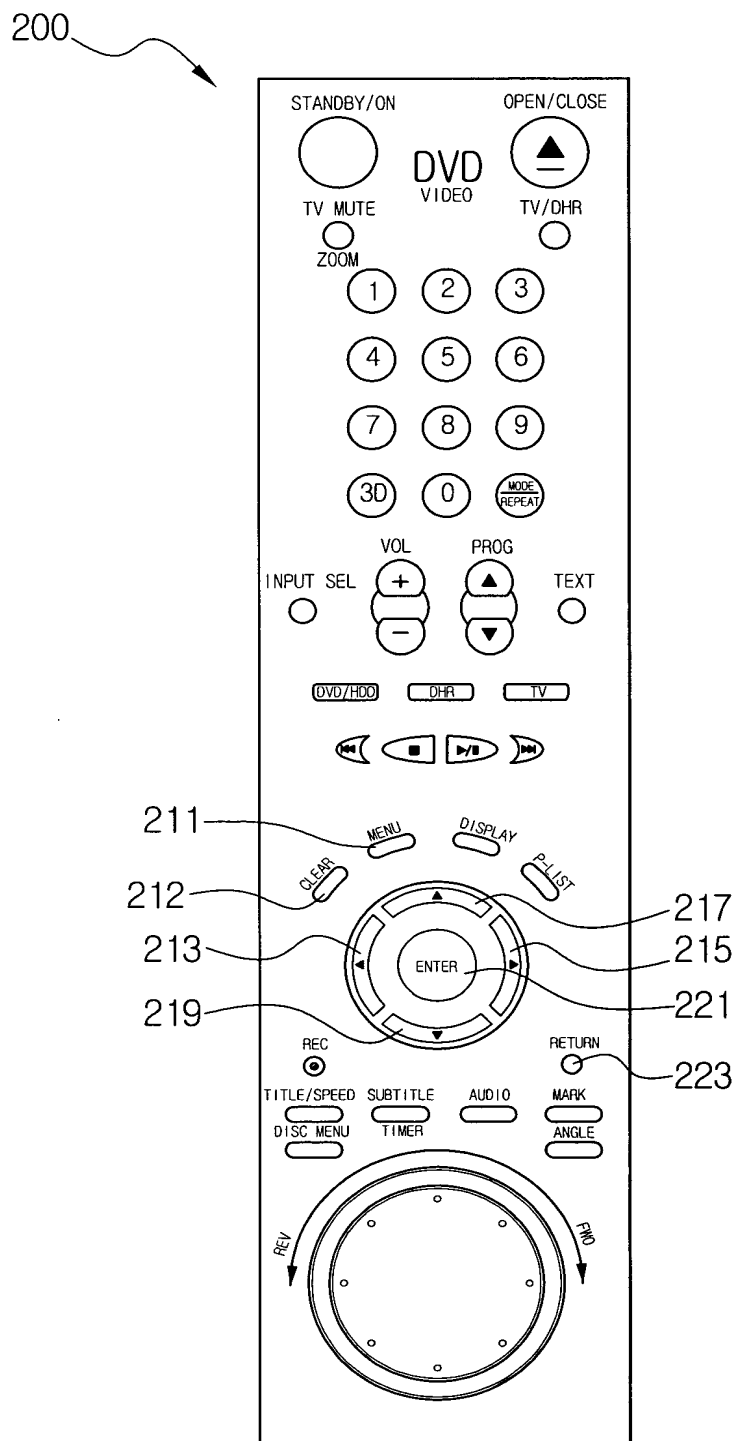

# FIG. 4A

400



MENU	
 Digital Recorder	
 DVD Player	
 Juke Box	
 Photo Album	
 Set-Up	
Instructions	 Move  Return  Enter  Menu Exit


# FIG. 4B

MENU	
+ Digital Recorder	+ Language
+ DVD Player	+ Channel
+ Juke Box	+ Clock Setting
+ Photo Album	+ Buffer time
+ Set-Up	+ Audio option
	+ Display option
	+ TV Type
Instructions	◀▶ Move    ↻ Return    ⏮ Enter    Menu Exit

# FIG. 4C

MENU		
+ Digital Recorder	+ Language	1Hr
+ DVD Player	+ Channel	2Hr
+ Juke Box	+ Clock Setting	3Hr
+ Photo Album	+ Buffer time	4Hr
+ Set-Up	+ Audio option	Auto
	+ Display option	off
	+ TV Type	
Instructions	◀▶ Move    ↻ Return    ⏮ Enter    Menu Exit	

# FIG. 5A

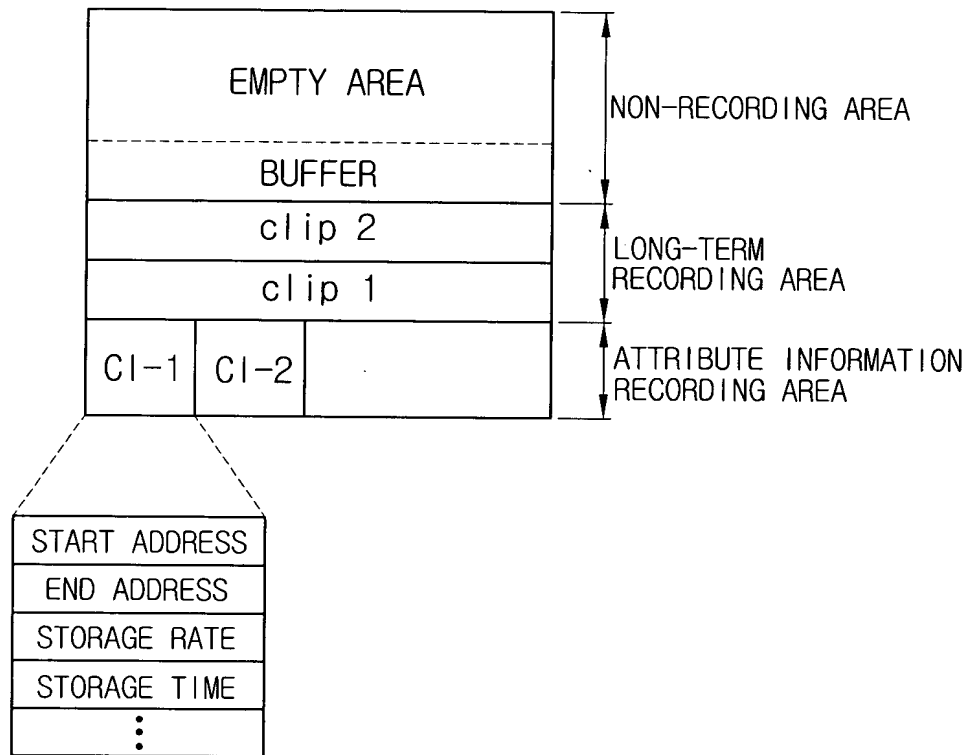

# FIG. 5B

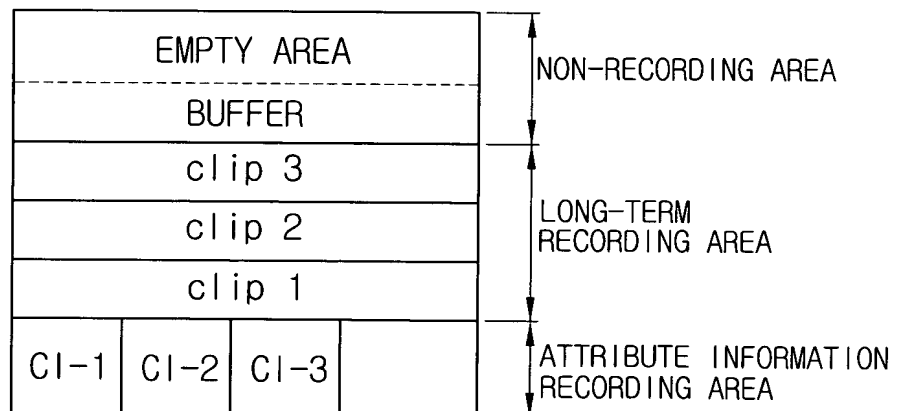


FIG. 6

